

EGH 120, 130: Room transducer, relative humidity and temperature, surface-mounted

How energy efficiency is improved

Precise measurement of humidity and temperature for energy-efficient control of HVAC installations in buildings

 
Features

- Measurement of humidity via a fast, capacitive sensor
- Active measuring element
- Suitable for direct wall mounting and recessed junction boxes
- Converts the measured values into a continuous analogue signal (0...10 V / 4...20 mA)



EGH120F042

EGH130F032



Technical data

Parameters		
Relative humidity	Measuring range	0...100% rh, no condensation
	Measuring accuracy	±2% between 10...90% rh (typ. at 21 °C)
Temperature	Measuring range	0...50 °C
	Measuring accuracy	±0.5 °C (typ. at 25 °C)

Ambient conditions	
Ambient temperature	-35...70 °C
Ambient humidity	Max. 85% rh, non-condensing

Construction	
Colour	Traffic white (RAL9016)
Housing material	Polycarbonate (PC) UL94-V0
Cable inlet	Through the rear wall
Connection terminals	Spring-type terminals, max. 1.5 mm ²
Weight	80 g

Standards, directives		
	Type of protection	IP20 (EN 60529) after fitting
CE conformity ¹⁾	EMC-D 2014/30/EU (CE)	EN 60730-1 (mode of operation 1, residential premises)
	RoHS-D 2011/65/EU & 2015/863/EU (CE)	EN IEC 63000

Overview of types				
Type	Description	Output signal	Power supply	Power consumption
EGH120F042	Room transducer, rh, temp.	Active, 2 × 4...20 mA Max. load 500 Ω	15...24 VDC, ±10 %	Max. 1 W
EGH130F032	Room transducer, rh, temp.	Active, 2 × 0...10 V Min. load 20 kΩ	15...24 VDC (±10%) 24 VAC, ±10%	Max. 0.3 W (24 VDC) 0.5 VA (24 VAC)

Accessories	
Type	Description
0300230010	USB Bluetooth® dongle

Description of operation

The EGH 120 and EGH 130 room transducers measure the relative humidity and temperature in indoor spaces such as residential premises, offices, museums or conference rooms.

Humidity measurement

A fast capacitive sensor measures the relative humidity and a measuring amplifier converts it to a 0...10 V or 4...20 mA standard signal.

¹⁾ Explanation of abbreviations in the "Additional technical information" section of the product data sheet and in the appendix to SAUTER product catalogues



Temperature measurement

A sensor measures the temperature and a measuring amplifier converts it to a 0...10 V or 4...20 mA standard signal.

Intended use

This product is only suitable for the purpose intended by the manufacturer, as described in the "Description of operation" section. All related product regulations must also be adhered to.

The device is only intended for use inside buildings. Modifying or converting the product is not admissible.

Improper use

The product is not suitable for:

- Safety applications
- Outdoor use and use in areas where there is a risk of condensation

Engineering and fitting notes



NOTICE!

Connection and fitting may only be carried out by an authorised electrician. The regulations and rules of electrical installation must be observed.



NOTICE!

Electronic components can be damaged by electrostatic discharge (ESD).

- ▶ Do not touch the PCB, exposed sensor elements and connections.

The device is not failsafe. In cases where a failure or malfunction of the room transducer could result in personal injury or damage to the controlled system or other property, additional protective and warning devices must be incorporated into the system. Integrate monitoring or alarm systems, safety or limit controllers for this purpose.

Electrical connection

The devices are designed for operation with safety extra low voltage (SELV/PELV). The electrical connection is made via spring-type terminals. Wire stripping length approx. 8 mm.

The device may only be connected when the power cable is disconnected from the electrical supply.

It is advisable to protect the room transducer from electrical damage with a 2AT safety fuse. No such fuse is integrated in the device.

Cable-related measurement deviations

When routing the cables, remember that electromagnetic fields (EMC interference) can affect the measuring accuracy. This effect increases the longer the cable is and the smaller the conductor cross-section is. Therefore always use shielded connection and signal cables and/or avoid laying parallel with power cables.

Heat caused by dissipated electric power

Resistance temperature sensors always have an electrical power loss that affects the temperature measurement. In active temperature sensors, the higher the operating voltage, the greater the power loss. This dissipated power must be taken into account in the temperature measurement. At a fixed operating voltage (± 0.2 V), this is normally done by adding or subtracting a constant offset value.

The room transducers have a variable operating voltage, but due to the way they are manufactured, only one operating voltage can be taken into account. As standard, the transducers are set to an operating voltage of 24 VDC. This means that, at this voltage, the expected measurement error of the output signal is smallest. At other operating voltages, the offset error increases or diminishes due to the change in power loss of the sensor electronics. If recalibration is required later during operation, this is done by the system on the connected controller.



Note

Heat generated by the power loss in the device is dissipated faster by draughts. This causes temporary measurement deviations.

Fitting

The EGH 120, 130 is suitable for mounting in a 60 mm recessed junction box or directly on the wall. A fitting height of 140 to 150 cm is recommended.

The lower section of the housing can be premounted and wired separately from the upper section.

Note




The following fitting instructions must be observed:

- Incorrect fitting can lead to incorrect measuring results. The place of installation must also be chosen carefully to ensure reliable measurement.
- The air vents must not be covered or sealed.
- The Micro-USB port and the fastening screw on the underside of the housing must not be obstructed by other devices.

Avoid:

- Poorly insulated exterior walls
- Heat sources (e.g. radiators, lamps, heating pipes)
- Doors and windows with draughts
- Direct sunlight
- Corners of rooms and alcoves
- Proximity to curtains, cupboards, shelves and other furnishings. These can prevent the flow of room air around the sensor.
- Multiple devices directly above each other. A device's own heat can affect the one above it.

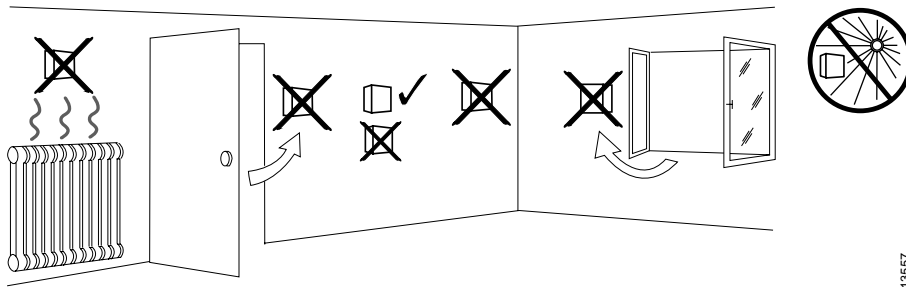

Also, air flowing from the ducts and pipes of the electrical installation can cause measurement errors. Empty pipes and installation pipes should therefore be well sealed.

Removal

Remove the upper section of the housing as follows:

1. Undo the slotted-head screw on the underside.
2. Slightly tilt the housing from below.
3. Insert a flat-blade screwdriver into the notch at the top and carefully push down the latch until the upper section of the housing is released and can be taken off.

Commissioning

The output signal is not available until a few minutes after switching on. The signals generated while switching on may fluctuate and not correspond to the measured value.

The sensors are factory-calibrated and can be recalibrated via the USB interface if necessary.

Notes for users

In normal operating conditions, the devices are very slow to deteriorate through age. Humidity sensors age much more quickly if used in rooms with very contaminated air or aggressive gases. These factors depend on the concentration of the aggressive media and can cause the sensor to drift permanently.

In areas with very contaminated air, the warranty does not cover the premature replacement of the room transducer.

Configuration

The device can be configured using the SAUTER Room Sensor Connect mobile app. The app supports the following functions:

- Communication via USB Bluetooth® dongle (accessory 0300230010)

- Reading device information and live data
- Custom configuration of output signals
- Adjusting measuring ranges
- Readjustment of offset values
- Parameterisation of the live zero signal (1...10 V etc.)
- Adjustment of maintenance intervals
- Saving and loading configurations

The mobile app is available free of charge in the Google Play Store and the Apple App Store.



Connecting the device to the Room Sensor Connect mobile app

1. Install the app and activate Bluetooth on the mobile device.
2. Connect the USB dongle to the EGH (see fitting instructions P100020342).
 - > The connected room transmitter is displayed in the app under "Connection Manager".
3. Perform the required device configurations or read out data.
4. After use, close the app and remove the USB dongle.

Additional information

	Document no./link
Fitting instructions for EGH	P100019818
Fitting instructions for USB dongle	P100020342
Declaration on materials and the environment	MD 34.121

Abbreviations used

CE	Manufacturer's Declaration of Conformity for the European Union (EU)
EMC-D	Electromagnetic Compatibility Directive 2014/30/EU
RoHS-D	Restriction of Hazardous Substances in Electrical and Electronic Equipment Directives 2011/65/EU & 2015/863/EU

Disposal



When disposing of the product, observe the currently applicable local laws.

More information on materials can be found in the Declaration on materials and the environment for this product.

Connection diagram

EGH120F042

EGH130F032

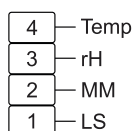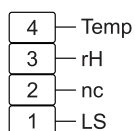

💡 EGH120F042: If only the Temp output (4) is used, the RH output (3) must be connected to earth/GND.

💡 nc: not connected

Dimension drawings

All dimensions in mm.

